












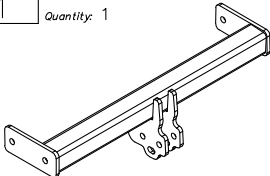





## Towbar accessories:

|   |                                    |   |  |   |   |
|---|------------------------------------|---|--|---|---|
| Pos.<br>1   | Name: Main bar<br>Quantity: 1      | Pos.<br>6   | Name: Plate of the bracket<br>Quantity: 2                            | Pos.<br>12  | Name: Nut 8 B<br>Quantity: 8<br>Dim.: M10             |
|  |                                    |  |  |  |   |
| Pos.<br>2   | Name: Tow ball<br>Quantity: 1      | Pos.<br>7   | Name: Distance sleeve<br>Quantity: 8<br>Dim.: Ø17,2x2,35mm<br>L=69mm | Pos.<br>13  | Name: Plain washer<br>Quantity: 6<br>Dim.: Ø 13 mm    |
|  |                                    |  |  |  |   |
| Pos.<br>3   | Name: Socket plate<br>Quantity: 1  | Pos.<br>8   | Name: Bolt 8,8 B<br>Quantity: 2<br>Dim.: M12x75mm                    | Pos.<br>14  | Name: Plain washer<br>Quantity: 16<br>Dim.: Ø 10,5 mm |
|  |                                    |  |  |  |   |
| Pos.<br>4   | Name: Left bracket<br>Quantity: 1  | Pos.<br>9   | Name: Bolt 8,8 B<br>Quantity: 8<br>Dim.: M10x100mm                   | Pos.<br>15  | Name: Spring washer<br>Quantity: 6<br>Dim.: Ø 12,2 mm |
|  |                                    |  |  |  |   |
| Pos.<br>5   | Name: Right bracket<br>Quantity: 1 | Pos.<br>10  | Name: Bolt 8,8 B<br>Quantity: 4<br>Dim.: M12x35mm                    | Pos.<br>16  | Name: Spring washer<br>Quantity: 8<br>Dim.: Ø 10,2 mm |
|  |                                    |  |  |  |   |
|   |                                    | Pos.<br>11  | Name: Nut 8 B<br>Quantity: 4<br>Dim.: M12                            | Pos.<br>17  | Name: Ball cover<br>Quantity: 1                       |
|   |                                    |  |  |  |   |



**PPUH AUTO-HAK Sp. J.**

Produkcja Zaczepów Kulowych  
Henryk & Zbigniew Nejman  
76-200 SŁUPSK ul. Słoneczna 16K  
tel/fax (059) 8-414-414; 8-414-413  
E-mail: [office@autohak.com.pl](mailto:office@autohak.com.pl)  
[www.autohak.com.pl](http://www.autohak.com.pl)

## Towing hitch (without electrical set)

Class: **A50-X** Cat. no. **Y24**

Designed for:

Manufacturer: **HONDA**

Model: **CR-V**

produced since 02.2002 till 02.2007

Technical data:

**D-value: 9,25 kN**

maximum trailer weight: **1690 kg**

maximum vertical cup load: **100 kg**

**Approval number acc. to regulations EKG/ONZ 55.01: E20-55R-01 0859**

## Foreword


This towing hitch is designed according to rules of safety traffic regulations. The towing hitch is a safety component and can be install only by qualified personnel. Any alteration or conversion of the towing hitch is prohibited and would lead to cancellation of design certification. Remove insulating compound and underseal from vehicle (if present) in the areas of the matting surfaces of the towing hitch. The vehicle manufacturer's specifications regarding trailer load and max. vertical cup mass are decisive for driving whereat values for the towing hitch cannot be exceeded.

*D-value formula:*

$$\frac{\text{Max trailer weight [kg]} \times \text{Max vehicle weight [kg]}}{\text{Max trailer weight [kg]} + \text{Max vehicle weight [kg]}} \times \frac{9,81}{1000} = D \text{ [kN]}$$

## FITTING INSTRUCTION

| Clamp mark<br>in acc. with |     | Cables joining            |
|----------------------------|-----|---------------------------|
| ISO                        | PN  |                           |
| 1                          | L   | Left directional lights   |
| 2                          | +   | Rear fog lights           |
| 3                          | 31  | Ground                    |
| 4                          | R   | Right directional lights  |
| 5                          | 58R | Right side parking lights |
| 6                          | 54  | Stoplights                |
| 7                          | 58L | Left side parking lights  |

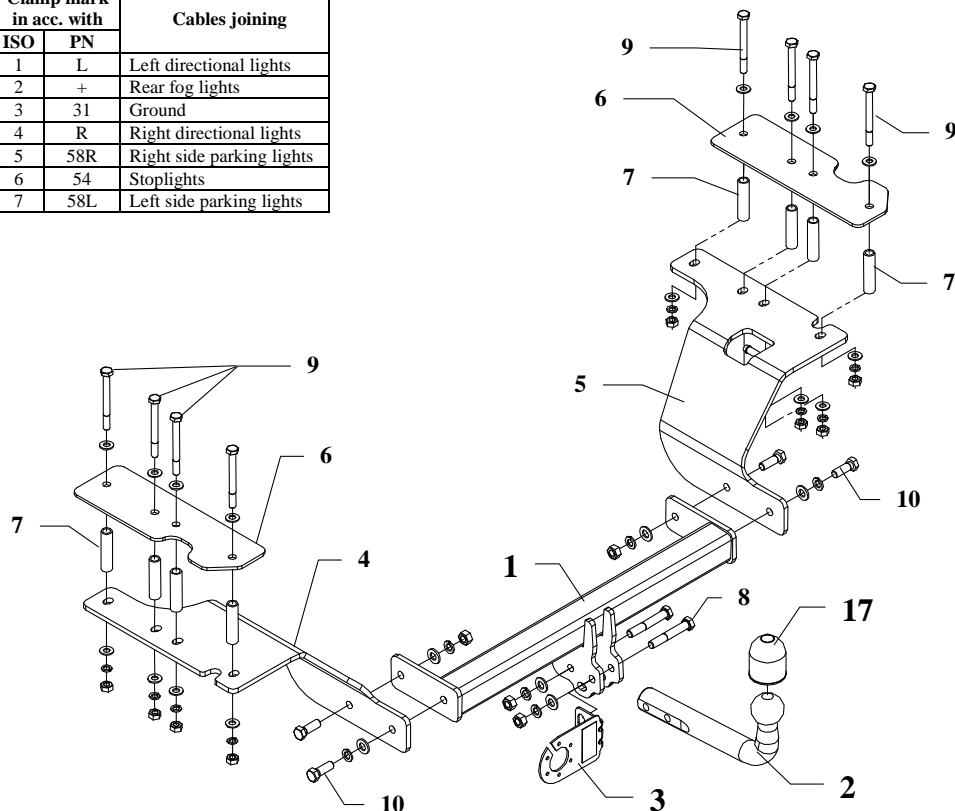

This towbar is designed to assembly in following cars:  
**HONDA CR-V** produced since 02.2002 till 02.2007, catalogue no. **Y24**  
 and is prepared to tow trailers max total weight **1690 kg** and max vertical  
 load **100 kg**.

### *From manufacturer*

Thank you for buying our product. Their reliability has been confirmed in many tests. Reliability of towbar depends also on correct assembly and right operation. For this reasons we kindly ask to read carefully this instruction and apply to hints.

*The towbar should be install in points described by a car producer.*

## The instruction of the assembly

1. Take the fitted carpet out the bumper, disassemble plastic bowl and unscrew side plastic panels.
2. Disassemble the muffler.
3. Find 4 signed places on the left and right side of the chassis member, then drill them using a drill  $\varnothing 10,5$  mm.
4. Find 4 signed places in the luggage part, then drill them using  $\varnothing 17,5$  mm and next position distance sleeves  $\varnothing 17$  mm L=69 mm (pos. 7).
5. Position fish-plates (pos. 6) in the trunk – see the drawing.
6. Position the right bracket (pos. 5) at the bottom of the car on the right holes of the chassis member and fix it using bolts M10x100mm pos. 9 (bolts put from trunk side!), do it the same positioning the left bracket (pos. 4) on the left chassis member.
7. Slide the bar (pos. 1) between the supports (pos. 4 and 5) and fix it using bolts M12x35mm (pos. 10).
8. Position the ball of towbar (pos. 2) with socket plate (pos. 3) and fix it using bolts M12x75mm (pos. 8) from the towbar accessories.
9. Tighten all nuts and bolts according to the torque shown in the table.
10. Reassemble the muffler (Attention!!! Left handle is welded to the support pos. 5).
11. Connect the electric wires according to the instructions of the car.
12. Complete the paint cover of towbar (during the mounting paint cover could be destroyed).

Torque settings for nuts and bolts (8,8):

|                    |                     |                     |
|--------------------|---------------------|---------------------|
| <b>M6</b> - 11 Nm  | <b>M8</b> - 25 Nm   | <b>M10</b> - 50 Nm  |
| <b>M12</b> - 87 Nm | <b>M14</b> - 138 Nm | <b>M16</b> - 210 Nm |

### NOTE

After mounting the towbar you should sign the car card at the Authorised Car Station.

The car should be equipment with:

- Indicators
- Tow mirrors

After **1000 km** of exploitation check all bolts and nuts. The ball of towbar has to be kept clear and conserve with a grease.