






RX2/L x2

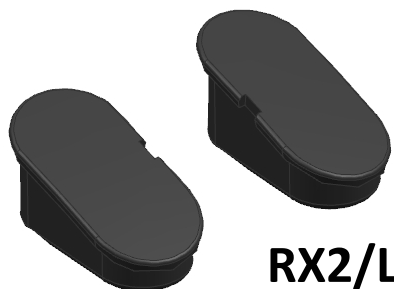


RX2/L x2

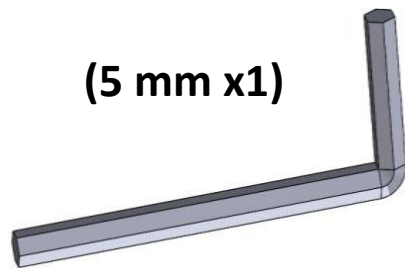

(5 mm x1)

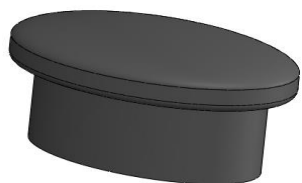

(x6)

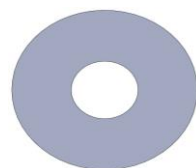

M6 (x10)



**M6X40 (x10) for front  
for middle  
for rear**



Products & Quality

## VW T-6 2015 → FLUSH TYPE ROOF RAIL LONG



# instructions





**REAR RIGHT**

**MIDDLE 3**

**MIDDLE 2**


**MIDDLE 1**

**FRONT RIGHT**

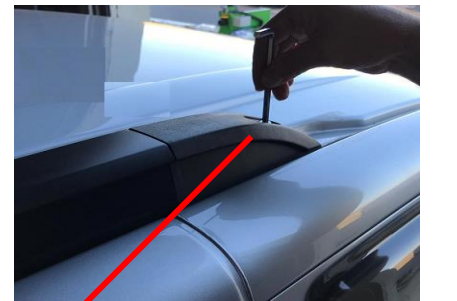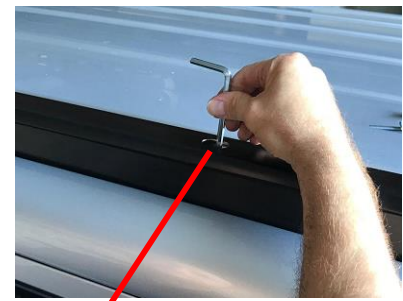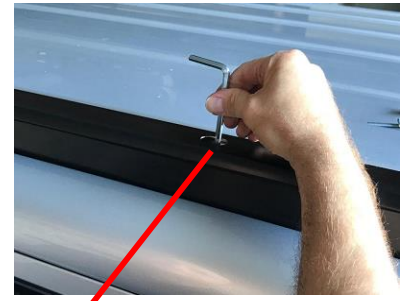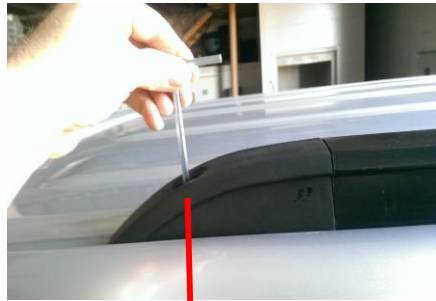

**REAR**

**FRONT**

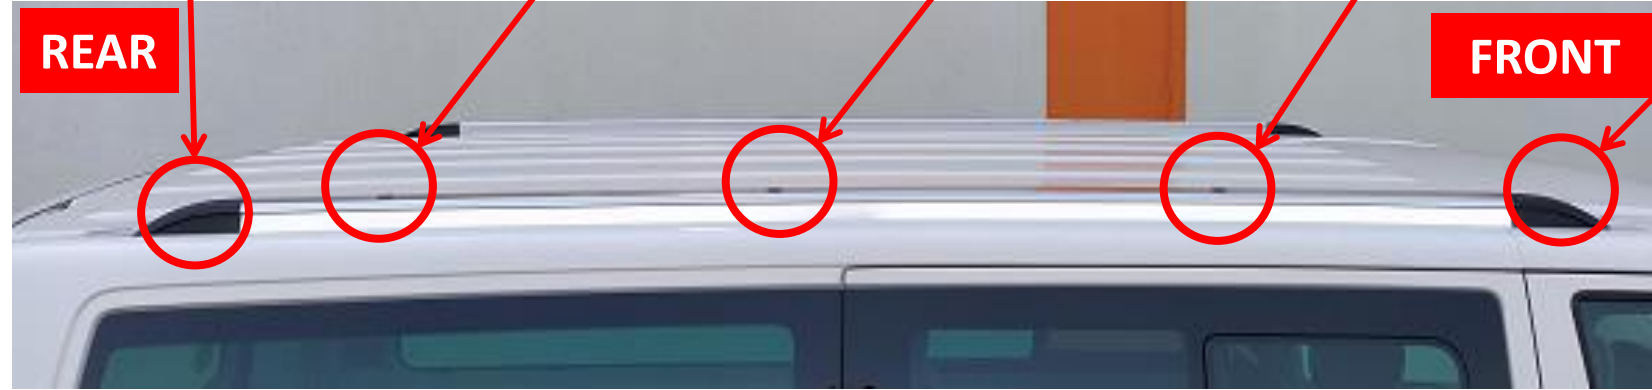

**Put the cilicon before tighten up to the screws.**

**Cıvataları sıkmadan önce silikon sıkın.**