



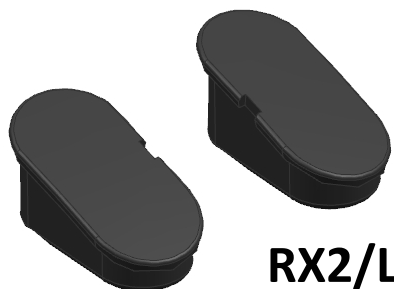


RX2/L x2




RX2/L x2

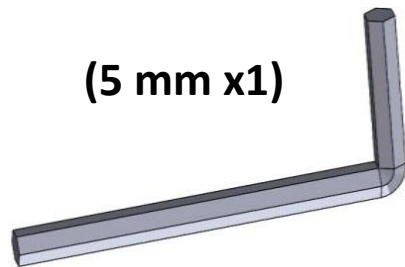

(5 mm x1)

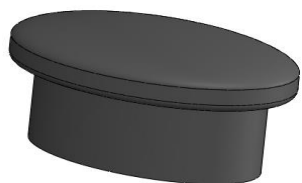

(x6)

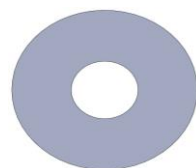

M6 (x10)



**M6X40 (x10) for front
for middle
for rear**



ERKU[®]
Products & Quality

**VW T-5 2003 → 2015
FLUSH TYPE ROOF RAIL LONG**



instructions





REAR RIGHT

MIDDLE 3

MIDDLE 2


MIDDLE 1

FRONT RIGHT

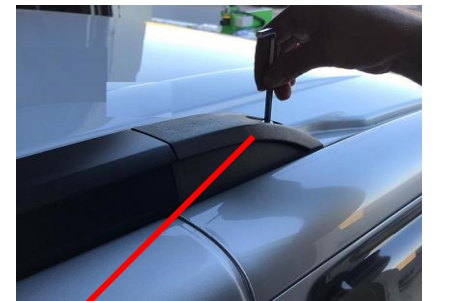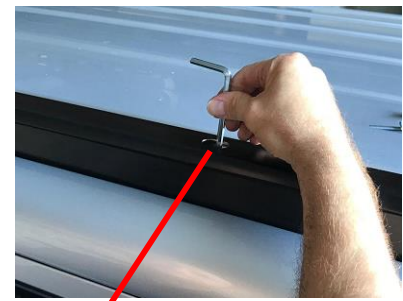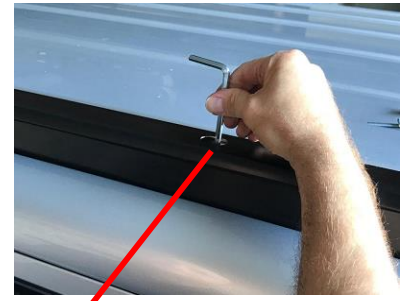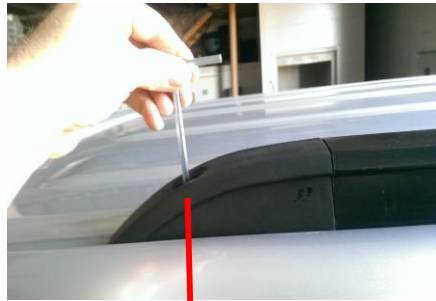

REAR

FRONT

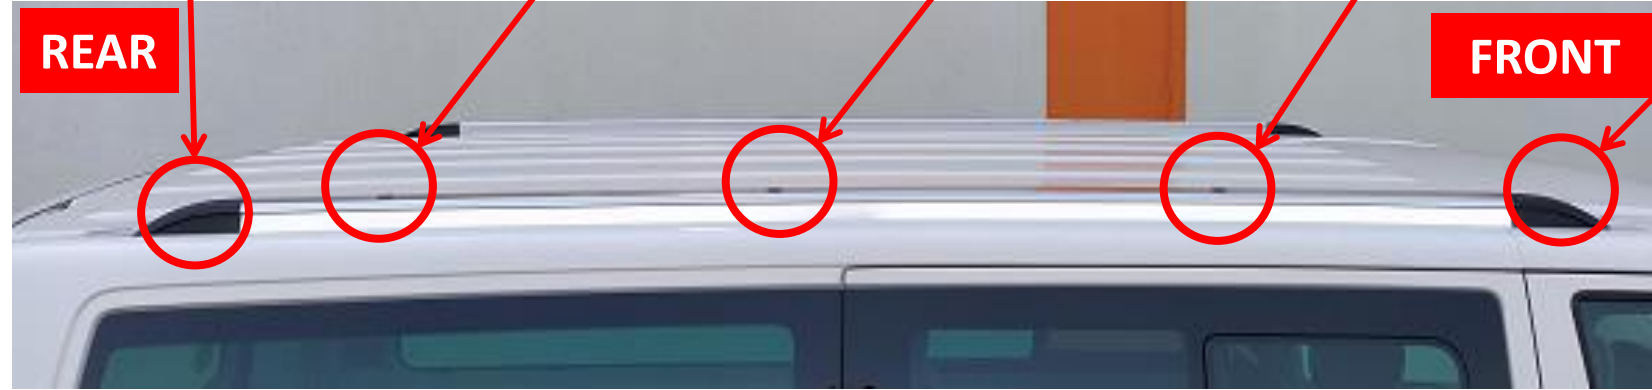

Put the cilicon before tighten up to the screws.

Cıvataları sıkmadan önce silikon sıkın.