

IMPORTANT: PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE !

Copyright © 2011 by E&G Classics, Inc. All right reserved. The reproduction or utilization of this work in any form or any electronic, mechanical, or other means, no known or hereafter invented, including xerography, photocopying, and recording, and in any information storage retrieval system is forbidden without written permission of owners.



2010-13 Toyota 4Runner Mesh Grille Upper and Lower Overlay

Part #: Complete 1129-0102-10R / "Black Ice" Part #1129-B102-10R
Upper Part #1129-010U-10R / Lower Part #1129-010L-10R



TOOLS REQUIRED

Small flat blade screwdriver, automotive grade masking tape, 9mm or 11/32" socket and ratchet, black paint, mild solvent, glass cleaner or alcohol and soft clean cloths.

05/14/2013

Notes to the Technician/Installer:

E&G is proud to present this package to you and reminds you that for technical information, contact technical assistance at 410-381-4900. Do not attempt the installation of any E&G product without first reading the detailed instructions. E&G Classics will not warrant damaged parts or the vehicle due to altered installation procedures.

E&G Classics Warranty Information:


E&G Classics, Inc. warrants its chrome parts and products to be free from defects in material, workmanship or finish for Thirty-Six (36) months from the date of shipment by E&G. This warranty is limited to the repair or replacement, at E&G Classics option, of the defective part or product. Full E&G Classics warranty information is available online @ www.egclassics.com. Just click on the product warranty icon.

For E&G Classic Product Returns:

Please contact the authorized E&G Classics Dealer where you purchased our product from in regards to any workmanship or warranty claims. All items returned to E&G Classics must have a return authorization number issued by us for inspection or a defective product and or warranty issue. All merchandise sent back to E&G Classics without proper paperwork or authorization will be rejected and returned.




1. Open the hood and remove the 13 factory plastic push pins securing the radiator support panel cover and remove the cover from the vehicle.

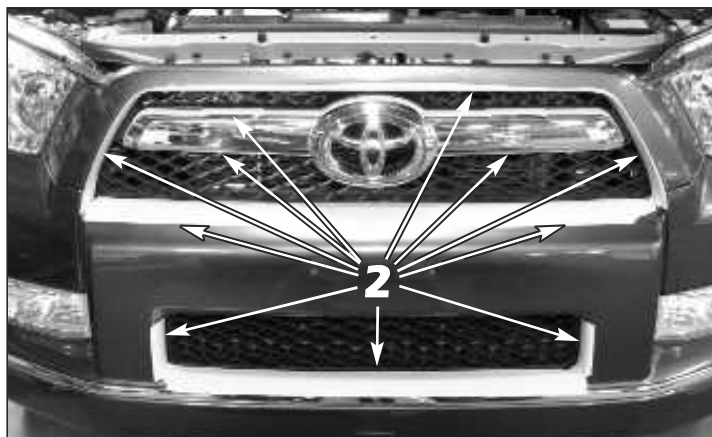

2. Apply protective masking tape around the upper and lower factory grille openings, as well as around the chrome bar in the upper grille.



3. Peel back one corner of the protective coating on the lower stainless steel surround then align the lower grille into place, making sure that the studs pass through the openings in the factory grille. Install the supplied large black plastic washers and #8-32 ESNA half nuts onto each corner stud and hand tighten at this time.

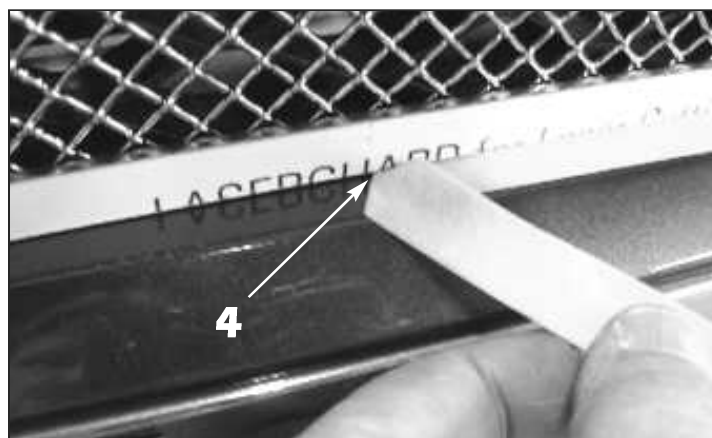

4. Remove the protective masking tape from around the lower grille only at this time. You will be able to shift the mesh grille around to prevent the tape from breaking and getting caught behind the mesh grille.




Copyright 2011 by E&G Classics, Inc.

Visit us online today at www.egclassics.com




5. Once the masking tape has been removed, use a 9mm or 11/32" socket to tighten the #8-32 ESNA half nuts until the washers no longer rotate. **Install the 3" long bracket onto the center bottom stud and the 4-1/2" long bracket onto the center upper stud and use the supplied #8-32 ESNA half nuts to secure.** DO NOT OVERTIGHTEN the nuts or you could indent the stainless steel surround at the stud locations.

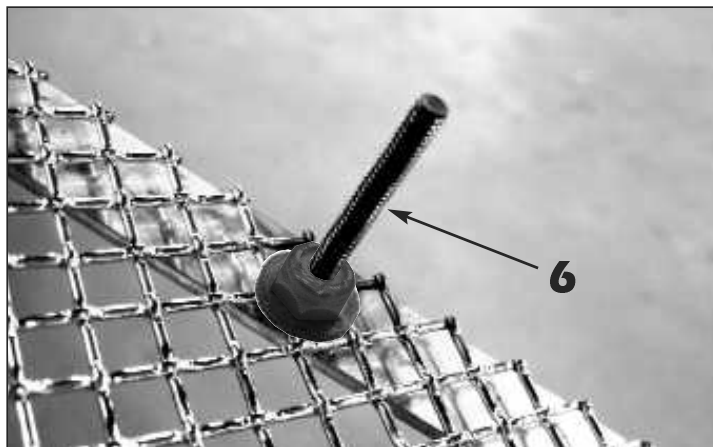


6. Prior to upper grille installation, apply black paint to the upper grille's lower studs and ESNA nuts to help conceal them once the grille is installed.



7. Peel back one corner of the protective coating on the lower stainless steel surround, then align the upper mesh grille into place making sure the studs pass through the factory openings in the grille.

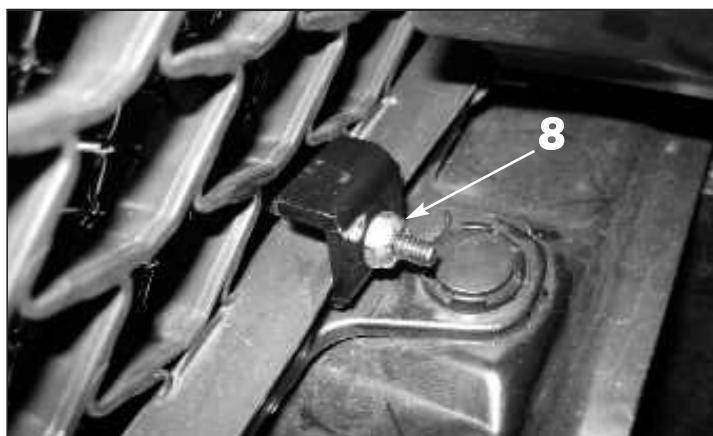

8. Install the supplied upper grille lower mounting brackets, part number 1073-0159-10 and secure them using the supplied #8-32 ESNA half nuts but do not tighten completely at this time.

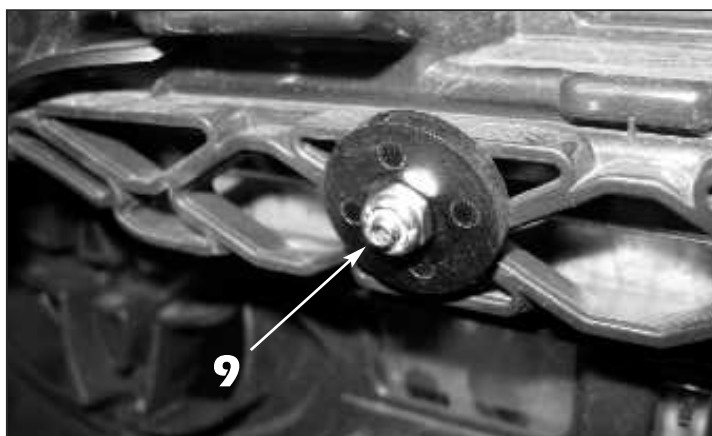

9. Install the supplied large black plastic washers and #8-32 ESNA half nuts onto the upper grille's center and upper mounting studs but do not tighten completely at this time.



10. Once the protective masking tape has been removed, tighten the #8-32 ESNA half nuts until the washers no longer rotate. DO NOT OVERTIGHTEN or you could indent the stainless steel surround at the stud locations.



11. Reinstall the radiator support panel bracket back onto the vehicle. Peel off the protective coating from the upper and lower surrounds and use a mild solvent and a soft, clean cloth to remove any glue residue. Use alcohol or glass cleaner and a soft, clean cloth to remove any solvent residue.

"Black Ice" Fine Mesh Part #1129-B102-10P

Quantity:	Description:	Part Number:
1	Upper Mesh Grille Assembly	*****
1	Lower Mesh Grille Assembly	*****
1	Installation Hardware Kit	1129-1902-10R
4	Upper Grille Lower Brackets	1073-0159-10
8	Large Black Plastic Washers	1999-0264-00
14	#8-32 ESNA Half Nuts	1999-0065-00
1	Lower Grille Upper Center Bracket	1129-0156-10
1	Lower Grille Lower Center Bracket	1317-0049-12

Fine Mesh Part #1129-0102-10R

Quantity:	Description:	Part Number:
1	Upper Mesh Grille Assembly	*****
1	Lower Mesh Grille Assembly	*****
1	Installation Hardware Kit	1129-1902-10R
4	Upper Grille Lower Brackets	1073-0159-10
8	Large Black Plastic Washers	1999-0264-00
14	#8-32 ESNA Half Nuts	1999-0065-00
1	Lower Grille Upper Center Bracket	1129-0156-10
1	Lower Grille Lower Center Bracket	1317-0049-12

Upper Only Part #1129-010U-10R

Quantity:	Description:	Part Number:
1	Upper Mesh Grille Assembly	*****
1	Installation Hardware Kit	1129-1903-10R
4	Upper Grille Lower Brackets	1073-0159-10
4	Large Black Plastic Washers	1999-0264-00
8	#8-32 ESNA Half Nuts	1999-0065-00

Lower Only Part #1129-010L-10R

Quantity:	Description:	Part Number:
1	Lower Mesh Grille Assembly	*****
1	Installation Hardware Kit	1129-1905-10R
4	Large Black Plastic Washers	1999-0264-00
6	#8-32 ESNA Half Nuts	1999-0065-00
1	Lower Grille Upper Center Bracket	1129-0156-10
1	Lower Grille Lower Center Bracket	1317-0049-12

MADE IN



AMERICA

