



2008 Nissan Titan "Q" & Mesh Grille Installation Instructions

J 09 G7R

Notes to the Technician:

E&G is proud to present this package to you and reminds you that for technical information, contact Lynn Eash or Lee Clary at 410-381-4900. Do not attempt installation any E&G product without first reading the detailed instructions. E&G Classics will not warrant damaged parts or vehicle due to altered installation instructions.

Copyright © 2007 by E&G Classics, Inc.

All right reserved. The reproduction or utilization of this work in any form or any electronic, mechanical, or other means, no known or hereafter invented, including xerography, photocopying, and recording, and in any information storage retrieval system is forbidden without written permission of owners.



4 Piece "Q" Part Number 1324-0185-08Q

Quantity	Description	Part No.
1	Left "Q" Grille	1324-018B-08Q
1	Center "Q" Grille	1324-0184-08Q
1	Right "Q" Grille	1324-018A-08Q
1	Lower "Q" Grille	1323-0183-04Q
1	Hardware Kit (components listed below)	1324-0182-08Q
12	Mounting Brackets	1108-0158-97
16	8-32 Half ESNA Nuts	1999-0065-00
10	Black Silicone Sleeves .156" x 1"	1999-0241-00
4	1.006" x .189" x .064" Black Plastic Washers	1999-0264-00
5'	Grille Edge Guard - Black	1999-0095-00
2	#10 x 1-1/2" S.S. Pan Head Screws	1999-0237-00

4 Piece Mesh Part Number 1324-0102-08

Quantity	Description	Part No.
1	Left "Mesh" Grille Surround	1324-0024-08
1	Center "Mesh" Grille Surround	1324-0023-08
1	Right "Mesh" Grille Surround	1324-0022-08
1	Lower "Mesh" Grille Surround	1323-0025-04
1	Right Mesh Section	1324-002A-08
1	Right Center Mesh Section	1324-002B-08
1	Left Center Mesh Section	1324-002C-08
1	Left Mesh Section	1324-002D-08
1	Lower Mesh Section	1323-0021-04
1	Hardware Kit (components listed below)	1324-1902-08
12	Mounting Brackets	1108-0158-97
18	8-32 Half ESNA Nuts	1999-0065-00
10	Black Silicone Sleeves .156" x 1"	1999-0241-00
6	1.006" x .189" x .064" Black Plastic Washers	1999-0264-00
5'	Grille Edge Guard - Black	1999-0095-00
4	Small Black Plastic Washers	1999-0256-00
2	#10 x 1-1/2" S.S. Pan Head Screws	1999-0237-00

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

IMPORTANT! The exposed edges of the stainless steel grille can be extremely sharp. Please handle with care.

WARRANTY INFORMATION:

E&G Classics, Inc. warrants its chrome parts and products to be free from defects in material, workmanship or finish for Twenty-Four (24) months from the date of shipment by E&G. This warranty is limited to the repair or replacement, at E&G Classics option, of the defective part or product.

To obtain performance under this warranty you must:

- 1.) Present your E&G unit to an authorized distributor in your area with proof of purchase.
- 2.) If no distributor is available, contact E&G Classics (address below) for authorization to return unit.
- 3.) Returns - All unauthorized returns will be refused. Merchandise approved by E&G for return must have been purchased within the Twenty-Four (24) months. All returns require an authorization number obtained from E&G and the actual return must be accompanied by the written authorization form filled out completely. All merchandise must be inspected upon receipt and shortages reported within in 48 hours. All merchandise must be in a resalable condition. Merchandise must be packed carefully in the original packing. If original packing is no longer usable, repack item(s) comparable to original manner. All returns are subject to a 25% handling charge. Special order items are not returnable. Defective merchandise must have an explanation of the problem. No credit will be issued unless invoice number and date of purchase has been supplied. Manufacturer shall be sole judge of defects in a product.
- 4.) UPS accounts - All returns must be prepaid. Do not send return shipments freight collect. Once E&G has made its decision and it is a claim against our warranty policy, E&G will credit incoming freight on damaged parts.
- 5.) No discontinued part or parts changed due to body style are returnable.

For Return Authorization, write or telephone: E&G Classics, Inc., 8910 McGaw Court, Columbia, MD 21045 (410) 381-4900 Attn.: Return Department


You are responsible for inspecting all packages containing E&G Classics' parts and product immediately upon their receipt and must file a claim with the carrier for any damage disclosure by such inspection and notify E&G classics in writing at the above address of any such damage. This warranty does not extend to any of our products which have been subject to misuse, neglect, accident or have been altered or repaired in any way. This warranty does not cover any accidental or consequential damages for any breach of this warranty agreement. E&G Classics shall have no responsibility for any loss of time, inconvenience, commercial loss or consequential damage, nor shall E&G be liable for any injury or damage to persons or property by reason of any defect in material, workmanship or finish of its parts or products. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.



1. Open the hood use a long flat blade screw driver to rotate the exposed mounting clips that retain the upper grille. Turn them approx. 1/8 of a turn and the clips will release.



2. The top two mounting clips on each side that retain the upper grille can be release by pushing in on the side of the clip and pulling straight out.

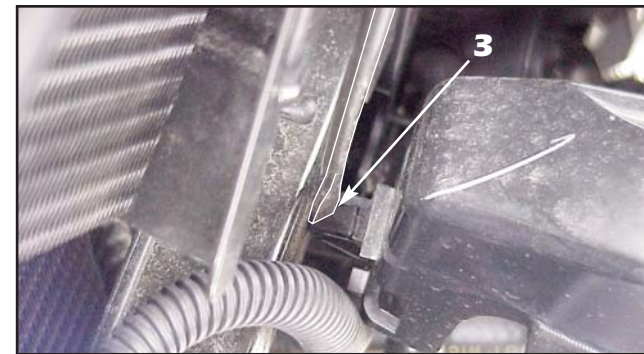

3. Release the lower three (3) mounting clips from the radiator support panel by inserting a long thin screwdriver between the grille and the support panel, push down and twist.


4. Remove all the factory mounting clips from the radiator support panel. They will be reinstalled back onto the assembled grille prior to reinstalling the upper grille.




5. Place the grille onto a clean work surface and remove the left and right air deflectors from the back of the upper grille by prying out with a flat blade screw driver.




6. Apply protective masking tape to the factory upper grille as shown. This will help protect the factory grille finish while installing the stainless steel grille sections.

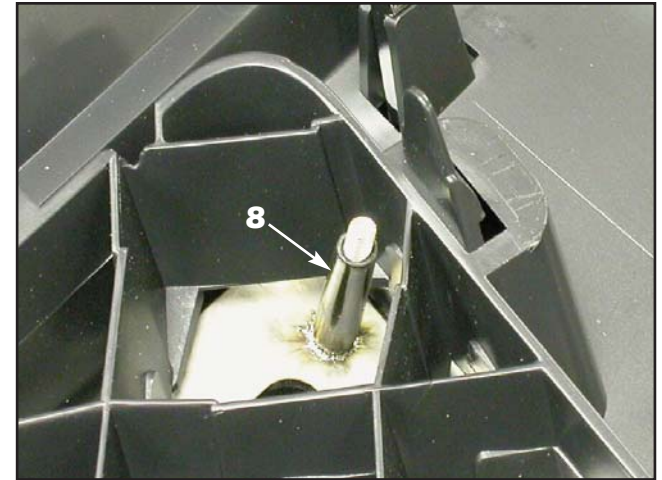


7. For "Q" grilles and mesh frames: Peel the protective cover from the stainless steel grille & emblem surrounds and remove the glue residue using solvent and glass cleaner.
8. Align the stainless steel "Q" grille sections or the mesh and stainless steel frames into the factory grille openings and install the supplied black silicone sleeves to hide the mounting studs were visible ("Q" grille shown, mesh same).

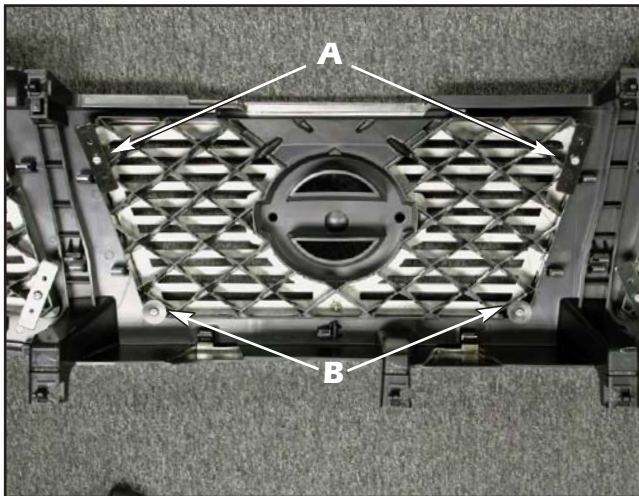


9. Align the mounting brackets (A) over the studs as shown. Align the large black plastic washers (B) over the studs as shown. Install 8-32 ESNA lock nuts and tighten until snug (Mesh grille shown, "Q" grille same). **DO NOT OVERTIGHTEN OR YOU COULD DENT THE STAINLESS STEEL FRAME AT THE STUD LOCATIONS!**

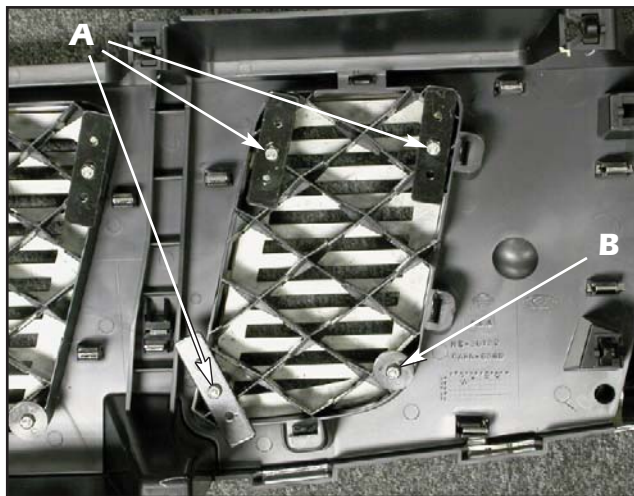

10. Align the upper mounting brackets (A) and large black plastic washer (B) over the studs as shown. Install 8-32 ESNA lock nuts and tighten until snug (Mesh grille shown, "Q" grille same). **DO NOT OVERTIGHTEN OR YOU COULD DISTORT THE GRILLE OR FRAME!**

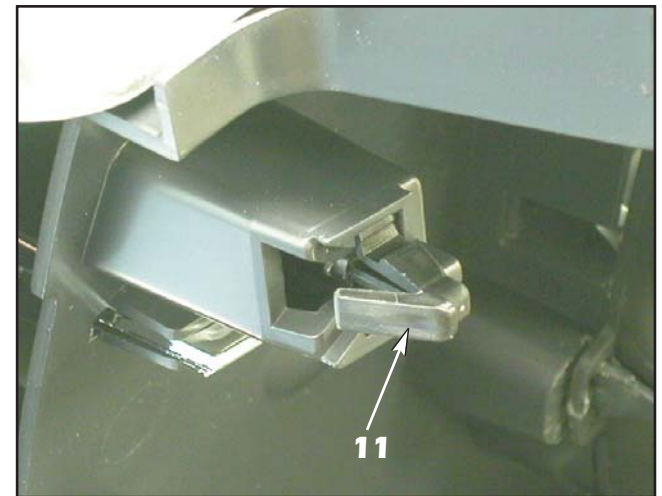

11. Remove the factory clips in the radiator support panel and reinstall them into the upper grille. The side clips are different, they feature an extra leg on the clip that must be installed as shown.

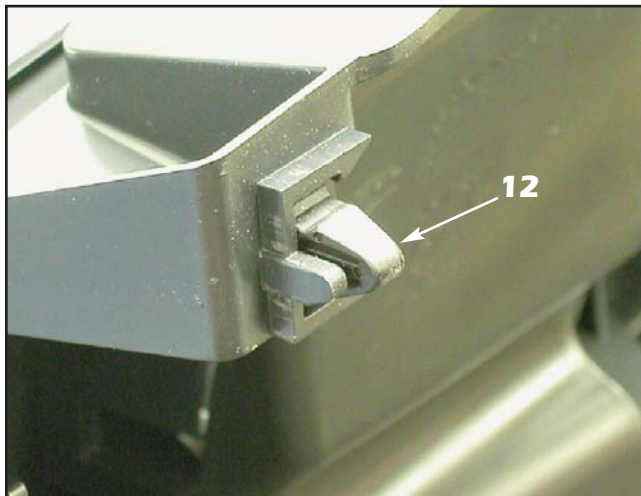

12. Remove the factory clips in the radiator support panel and reinstall them into the upper grille.




13. Reinstall the factory air defelctors back onto the assembled upper grille by snapping them back into place.




14. Install the black trim guard around the grille frame with the seam at the top. **For front license plate equipped vehicles:** place the seam at the bottom.


15. Align the mesh section over the frame, making sure the studs pass through the holes in the mesh. Install a black plastic washer and an ESNA nut onto the four (4) outer 1/2" studs and tighten. **DO NOT OVERTIGHTEN OR YOU COULD DENT THE STAINLESS STEEL FRAME!**

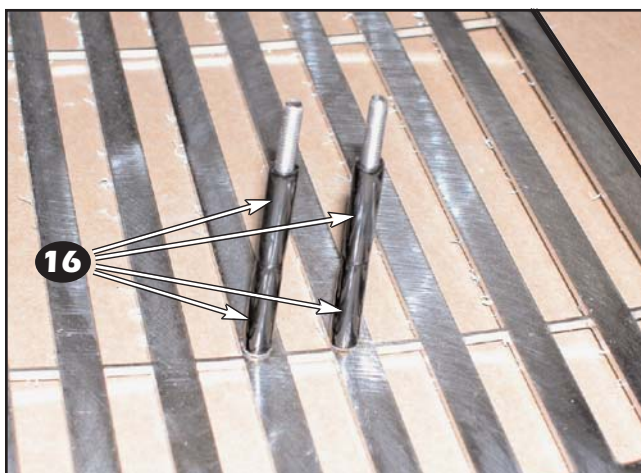


16. **For "Q" grille:** Install two (2) black silicone sleeves onto each mounting stud (trim the ends off with cutters or a razor blade). Install the black trim guard around the edge of the grille with the seam at the top.

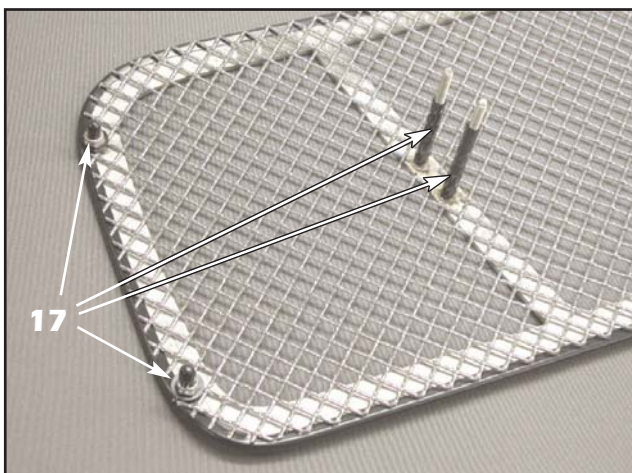

17. **For "Mesh" grille:** Install two (2) black silicone sleeves onto each mounting stud (trim the ends off with cutters or a razor blade). Install the short silicone sleeves removed for mesh installation (trim as needed) back onto the 1/2" studs to conceal the studs once the grille is installed into the lower opening.

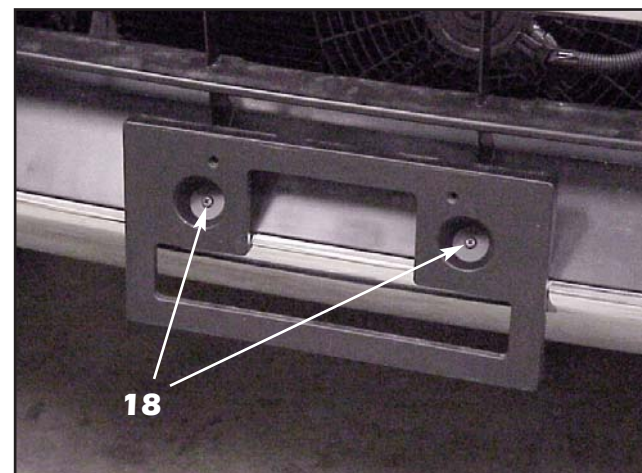


18. For vehicles equipped with a factory front license plate bracket, remove the phillips screws securing the bracket to the lower grille insert and remove it for modifications.

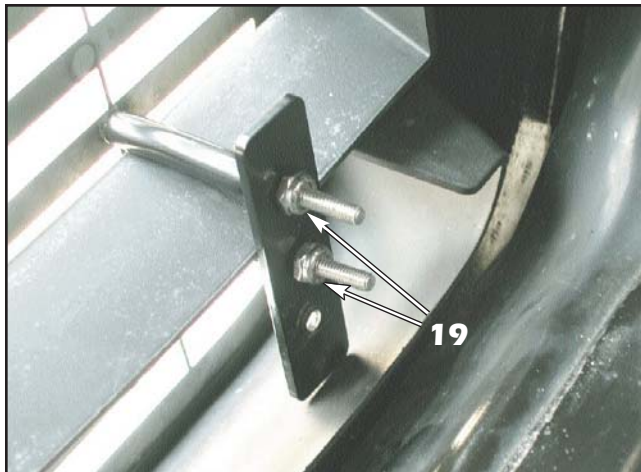

19. Align the lower grille into the opening, making sure the studs fit above and below the factory horizontal lower grille fin. This is a tight fit to keep the grille locked in place. Install the lower mounting brackets and ESNA lock nuts until the grill is snug (O grille shown, Mesh grille same). **DO NOT OVER TIGHTEN OR YOU COULD DENT THE GRILLE!**



20. For vehicles equipped with a front tag bracket, grind the upper portion of the screw boss flat, leaving the screw hole intact (cross-hatched areas shown). This will allow the tag bracket to fit flush against the grille, reusing the factory mounting holes.

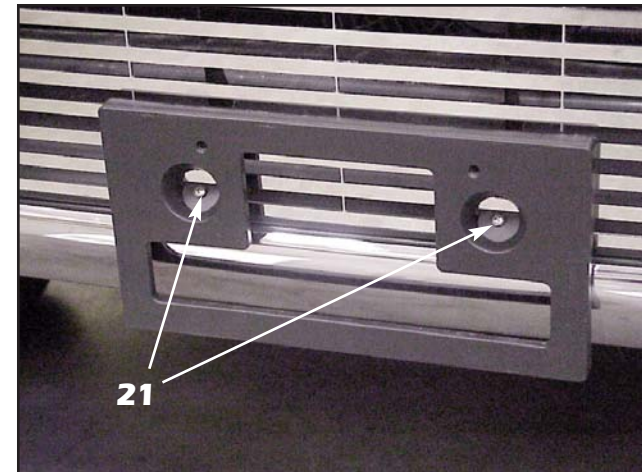

21. Reinstall the modified front tag bracket using the supplied #10 x 1-1/2" Pan head screws supplied in the hardware kit. The screws will pass between the frame and the lower fin or mesh opening and reuse the existing tag mounting holes.



22. Reinstall the upper grille assembly to finish the installation.